



Quick Start
for Site USB Device Server Industrial
DSI-1

Please refer to the instructions of SiteView, SiteView-Web and Pluto for basic communication with a USB Device Server.

1. Unbox DSI-1

Site USB Device Server Industrial comes with an USB cable.

Please;


- ❖ Connect DSI-1 to a 5VDC power supply via the enclosed USB cable.
- ❖ Connect DSI-1 to your local network with an Ethernet cable.
- ❖ Connect a data logger to the USB port of DSI-1.
- ❖ Wait for FOUR minutes. This will allow the system to recognize the plugged data logger(s).



2. Find DSI-1 and Create Connection from SiteView

Launch SiteView software in PC side and click "USB Server" tab:


Click "Search" button:

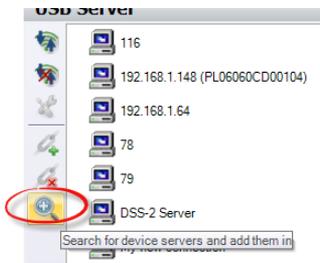

In the pop-up dialog click "OK" button to continue.




SiteView will search for Site USB Device Servers under the same network and the found ones will be added to the list automatically.

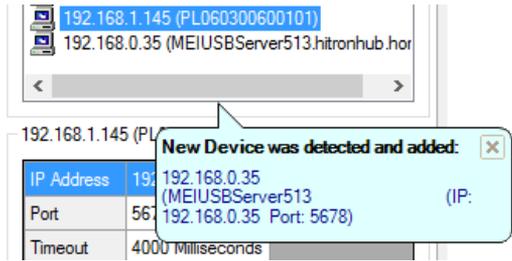

3. Communicate with Remote Data Logger

Double click the new created connection; the data logger icon will be listed under it:

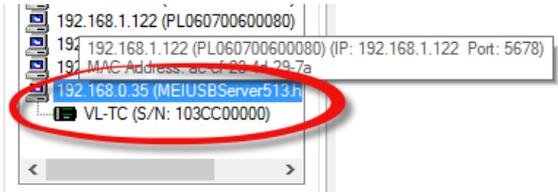

Double click the logger icon to show the status. Now you can download data, view real-time readings and more...

If the above method can't find the Device Server, you can click **Others -> Find Device in LAN** button to find the IP address of the Device Server based on its MAC address which is printed on the board.

4. Change Access Settings from Admin Portal

In the above steps, we assume DSI-1's settings are: Port: 5678, Password: 12345.

You can change these default settings from the admin's portal web page by entering the admin's address in the address box of a web browser:

http://[IP Address of the DSI-1]:8864

Enter 'admin' for both the Username and the Password.

Please sign in

Username

Password

Scroll down to 'USB Device Server Properties' panel and change any of the below settings.

IP Address	Port	Password
192.168.1.95	5678 Change	***** Change

If you have changed the above settings for a DSI-1 and you want to communicate with it from SiteView, SiteView-Web or Pluto, you must use the same settings when you create a connection for it.

Microedge Instruments Inc.

404 – 1688 152nd Street

Surrey, BC

Canada, V4A 4N2

Toll Free: 1.877.352.9158,

Fax: 778.807.5098

www.microedgeinstruments.com

info@microedgeinstruments.com